


# Zip™ Pole® Install Instructions

## ZipWall 10 is so easy to install

## How to install the Zipper


### Step 1

Attach the head assembly to the pole and then slide the Non-Skid plate to remove it from the head.

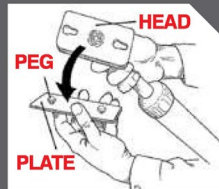


### Step 2

Clamp plastic sheeting between the two piece head assembly and slide the pegs into the keyhole slots to lock in.

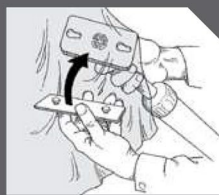

### Step 3

Unlock the pole by twisting the inner pole, then extend up to ceiling with the plastic attached.

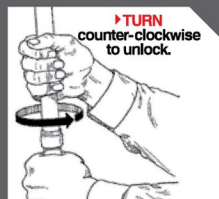


### Step 4

With the foot on the floor, press the spring-loaded head of the pole against the ceiling and then twist clockwise to lock.



### Step 5

Ensure the plastic is not sagging between poles, and release then pull taut if required.

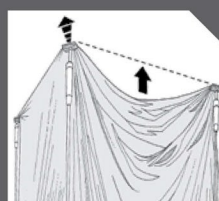

### Step 6

To secure the sheeting at the base, lift each pole and pull the plastic under the foot to make a tight fit. You are now ready to go.



### Step 1

Select the appropriate place for an entry/exit point to your barrier and line up the zipper.




### Step 2

Peel off the adhesive backing and stick the zipper to the plastic finishing at floor level.




### Step 3

Open up the zipper and cut an opening using the double bladed Zipper Cutter.

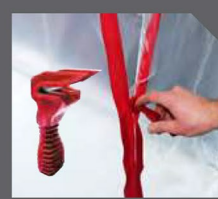

### Step 4

Your zipper is good to go and you now have a completely dust sealed entry point.

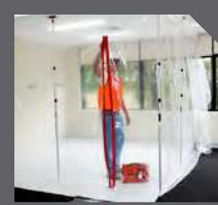

“ Contractors across all industries have given Zip™ Pole products an enthusiastic thumbs-up. With no tape, no ladders, and no damage, Zip™ Pole adds a professional touch to any job site. ”